 


# Pagers

NEC

Owner's Manual

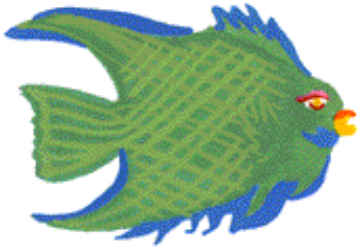


MessageMaker  
*index*  
Pagers



[Click Here For Warranty Information](#)

## External View of Pager

There are four control buttons which are located on the bottom of the pager.

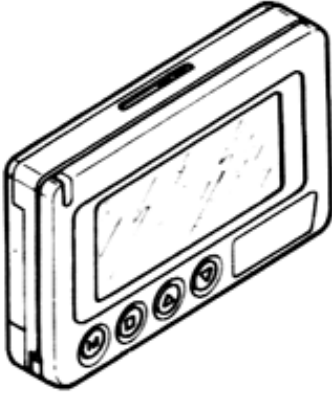

A. The **M** button is used to:

- Turn your pager on and off.
- Enter the menu code.

B. The **□** button is used to:

- Read messages.

- Select options.
- Confirm your selection.

C. The two buttons with  and  arrows are used to:


- Step through menu options.
- Recall and read your messages.

## Battery Replacement

A. Slide the battery cover latch into its unlock position.




B. Remove the battery cover by sliding in the direction of the arrow on the cover.

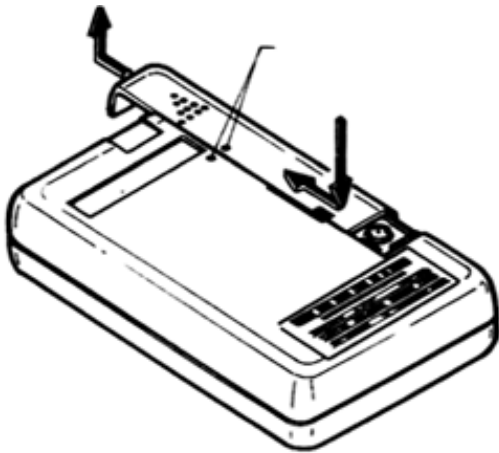

C. Install the "AAA" battery with the positive contact

corresponding to the (+) marking on the inside of the battery compartment.

- D. Replace the battery cover. Lock the battery cover by sliding the latch into its locked position.

When the pager detects low battery voltage, the message "**Warning: Low Battery**" with a  is displayed and an alert tone will sound.

## Turning Your Pager On and Off

### Turning Your Pager On



- A. Press and hold down the **M** button until the pager either beeps or vibrates.

- B. The display will automatically reset. The pager is now ready to receive messages.

### Turning Your Pager Off

- A. Press and hold down the **M** button, "**Mode 1**" or "**Mode 2**", and "**Press M to turn off**" is displayed with a single beep.

**Mode -1 (Beep Single)**

**Press M to turn off**

- B. Press the **M** button again and "**Pager Off**" will be displayed with a single beep. Your pager will automatically turn off.

**Pager Off**


Memory Back up allows your pager to store and hold messages in memory for a short time while you change the battery or when you turn the pager off.






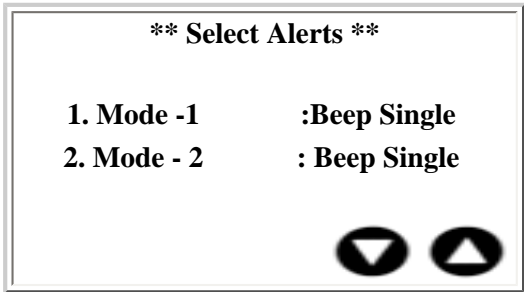 
You can choose from a variety of 14 different call alert options. With the two alert modes ("Mode 1" and "Mode 2") you can select your two favorite alerts and activate either one simply.




- 1. BEEP (SINGLE or DUAL)
- 2. MUSICAL (8 MELODIES)
- 3. CHIRP W/VIBRATION
- 4. CHIRP
- 5. VIBRATION
- 6. SILENT

 





A. Press the  from the standby screen. The menu will be displayed.




B. Move the highlight with the  or  "Set Alerts" and press the  button to select.

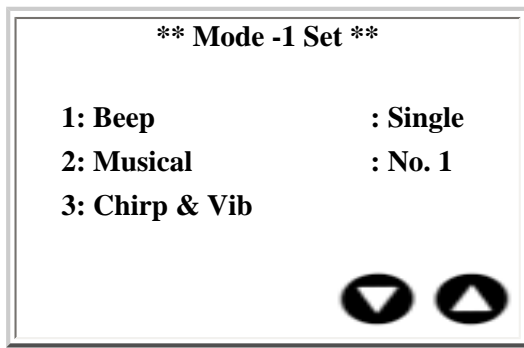

C. "1: Mode-1" will be highlighted. Press the  or  to view "2: Mode-2". Press  to select the mode alert you want to change.



D. You can now choose one of the 6 alerts. Press the  or  to step through the options. Press the  to select.

E. If you select either "**B**eep" or "**M**usical" alerts, press the  or  to step through the additional options, then press .

F. Press the  button to exit.