

Pagers

Owner's Manual

NEC

MessageMaker

Exec[®]
Pagers



[Click Here For Warranty Information](#)

Turning the Pager On and Off

- Slide switch (right side of pager) down to turn on and up to turn off.

Current time is displayed along with icons indicating features that are turned on.

Viewing Messages


- Press top button to view messages.

"CALL" is displayed if there are unread messages.

Protecting Messages

- Press top button to display desired message.
- Press bottom button. "PrOtECt" is displayed.


- Press top button again to verify message is protected. Protect

Icon  will be displayed with message.

Message is now protected in memory.

Unprotecting Messages

- Press top button to view protected messages. Protect icon

 is displayed.

- Press bottom button and then press top button to remove protect feature.

Deleting Individual Messages

- Press top button to display message to be deleted.
- Press bottom button 2 times. "**dELEtE**" is displayed.
- Press top button. "**dELEtEd**" is displayed. Message is now deleted from memory.

Deleting All Messages

- Turn pager off. All messages should be deleted.

Follow these directions if messages are not deleted

- Turn pager off.
- Press and hold bottom button while turning pager on.
- Release bottom button. "**dELEtE ALL**" is displayed.
- Press top button. "**dELEtEd ALL**" is displayed.