

Pagers

NEC

Owner's Manual



Message
Maker **Vue™**
Pagers



[Click Here For Warranty Information](#)






Turning Pager On


- Press and hold main button.




 


Turning Pager Off

- Press and hold main button until you hear one beep. Quickly release main button.
- Press main button again and hold down until "Power OFF" is displayed and the screen goes blank.






Setting Clock and Calendar

- Press and release main button. "Set Alerts" will be displayed.
- Press  until "Set Clock" is displayed and press  to confirm.
- The hour will be underlined. Press  repeatedly to select the desired hour and press  to confirm.
- The minute will be underlined. Press  repeatedly to select the








desired minute and press  to confirm.



- The "12H" (12 hour setting) or "24H" (24 hour setting) will be underlined. Press  repeatedly to select the desired hour clock setting and press  to confirm.
- Follow the same procedure to select the year, month and day.
- The  (clock display on) or  (clock display off) will be underlined. Press  repeatedly to select and press  to confirm.
- Press main button.

Changing Calendar Display






- Press and release main button. "Set Alerts" will be displayed.
- Press  repeatedly until "Set Options" is displayed and press  to confirm.
- AR Time Set will be displayed. Press  until calendar order appears. Press  then  to select options.
- Press main button.

Selecting "Sound On" Alerts

- Press and release main button. "Set Alerts" will be displayed.
- Press  and then press  repeatedly to select "Sound ON". Press  to confirm.
- Press  repeatedly to select "Beep" or "Musical" and press  to confirm.
- When "Beep" is selected, press  repeatedly to select either "Single" or "Dual" and press  to confirm.

- When "Musical" is selected, press  repeatedly to select any of the 16 melody alerts ("Melody 1" through "Melody 16") and press  to confirm.







Setting "Sound Off" Alerts

- Press and release main button. "Set Alerts" will be displayed.
- Press  and then press  repeatedly to select "Sound OFF".
Press  to confirm.
- Press  repeatedly to select either "Vibrator," "Chirp" or "Silent" and press  to confirm.





Setting Alert Mode

- Press and hold main button until either "Sound "ON" or "Sound OFF" is displayed.
- Release main button.





Setting Reminder Alert

- Press and release main button. "Set Alerts" will be displayed.
- Press  repeatedly until "Set Options" is displayed and press  to confirm.
- Press  repeatedly until "Reminder Set" is displayed and press  to confirm.
- Press  repeatedly to select either "ON" or "OFF" and press  to confirm.
- Press main button.





Viewing Messages

- Press either  or  to view your messages. NOTE: If you have unread messages, "Call Received" will be displayed. The  only allows you to view the first page of a message. The  allows you to review the entire message.






Protecting Messages

- Press either  or  to view your message.
- Press and release main button. "Protect" and the flashing  icon will be displayed.
- Press  twice to protect your message.
- Press main button.

Unprotecting Messages






- Press either  or  to view your protected message.
- Press and release main button. "Protect" and the flashing  icon will be displayed. Press  twice to unprotect your message.
- Press main button.

Deleting Messages





- Press either  or  to view a message.
- Press main button. "Protect" is displayed.
- Press  repeatedly until "Delete All" and the flashing  icon is displayed.
- Press  three times.

- Press main button.







Deleting Memory Messages





- Press either  or  to view a message.
- Press main button. "Protect" is displayed.
- Press  three times until "Delete All" and the flashing  icon is displayed.
- Press  three times.
- Press main button.

Selecting Alert Auto Reset Time

- Press and release main button. "Set Alerts" will be displayed.
- Press  repeatedly until "Set Options" is displayed and press  twice to select "AR Time Set."
- Press  repeatedly to select the "20" sec, "32" sec or "44" sec and press  to confirm.
- Press main button.






Setting Alarm

- Press and release main button. "Set Alerts" will be displayed.
- Press . "Set Alarm" will be displayed. Press  to confirm.
- Press  repeatedly to select either "Alarm ON" or "Alarm OFF" and press  to confirm.
- When "Alarm ON" is selected, the hour will be underlined. Press  repeatedly to select the desired minutes and press  to confirm.







- The minutes will be underlined. Press  repeatedly to select the desired minutes and press  to confirm.
- The Alarm Icon will be underlined. Press  repeatedly to select your choice of any of the 5 alarm icons that indicate the alarm icon is turned on and press  to confirm.
- Press main button.

Setting Timer



- Press and release main button. "Set Alerts" will be displayed.
- Press  repeatedly until "Set Timer" is displayed and press  to confirm.
- The minutes will be underlined. Press  repeatedly to select the minutes to be timed and press  to confirm.
- Press  to turn on or off.
- Press main button.

Selecting Message Scroll Speed

- Press and release main button. "Set Alerts" will be displayed.
- Press  repeatedly until "Set Options" is displayed and press  to confirm.
- Press  repeatedly until "Scroll Set" is displayed and press  to confirm.
- Press  repeatedly to select either "Line" or "Page" and press  to confirm.
- Press main button.









Reading a Mail Drop Message

- Read mail drop messages just like regular pages. See "Viewing Messages" section for instructions on reading messages.

Preset Messages





- The preset message function can be used provided the dealer or operating company has programmed this function into the pager and given the end-user the appropriate shift codes to use with their system.

Entering a New Preset Message

- Press the main button. "Set alerts" will be displayed.
- Press  five times. "Set preset" appears and the pen icon will flash. Press  to confirm.
- The pager screen will now show preset location one. Any message already in that location will appear in brackets. "Which Preset" will appear. Press  to select a vacant location.
- Press  to confirm this location.
- The first character position will be underscored. Press  once. "Select" will be displayed.
- Press  to scroll through the character set until the desired character appears. Hold down  to scroll rapidly. When the required character appears, press  to confirm.
- Repeat until entire message is in place (limit: 16 characters including spaces).
- Press the main button. The new message will momentarily appear with "Entered" displayed below it.

Editing a Preset Message

- Press the main button. "Set alerts" will be displayed.

- Press  six times. "Edit" appears and the pen icon will flash.
Press  to confirm. The first character of the existing message is underscored and "Position" will appear.
- Use  to move the cursor from left to right. When you've reached the correct character position, press .

Indicators



Beep Icon

Appears when the "Sound ON" feature has been activated.



Note Icon

Appears when the melody alert option has been activated.



Note and Vibrate Icon

Appears when the chirp and vibrate alert option has been activated.



Vibrate Icon

Appears when the "Sound OFF, Vibrate" option has been activated.



Clock Icon

Appears when editing the Clock feature.



Bell Icon

Appears when the "Alarm" feature has been activated.



Hourglass Icon

Appears when the "Countdown Timer" feature has been activated.



Pager Icon

Appears when editing the "Set Options" setting.



Silent Icon

Appears when the "Silent Alert" option has been activated.



Preset Message Icon

Appears when editing or entering preset messages.



Message Protection Icon

Appears when protecting a message.



Message Deletion Icon

Appears when deleting a message.



Scissors Icon

Appears when deleting all messages.



Closed Eye Icon

Appears when the clock display is turned off.



Open Eye Icon

Appears when the clock display is turned on.



Mail Icon

Appears when the pager receives a mail drop message.

**Battery Icon**

Appears when there is a low battery. The battery should be replaced as quickly as possible.