

Getting Started

1. English user' s Manual	3
2. French User' s Manual	32

TABLE OF CONTENTS

- Introduction
- Features
- External View of Nixxo Platinum Pager
- Description of Control Keys
- Description of Icons
- Basic Pager Operation
 1. Initial Set up
 2. Basic Operation
- User's Options
 1. What Option this Pager has
 2. Instructions to Enter User's Options
 3. Selecting & Changing User's Options
- Battery Information
 1. Low Battery Indication
 2. Replacing the Battery
 3. Battery Back Up

Introduction

Welcome to the NIXXO pager world!

This uniquely designed numeric pager, PLATINUM will bring you convenience and pleasure in your communication world. This user's manual will guide you from basic operations to user optional features.


Features

- ★ FLEX Capable
- ★ 16 Messages & 320 Characters Memory
- ★ Date & Time Display
- ★ Date & Time Display When Power Off
- ★ Receiving Time Stamping
- ★ Message Full Indication
- ★ Alarm
- ★ Vibration Alert
- ★ User Selectable 4 Melodies Alert & 1 Beep Tone
- ★ Message Lock
- ★ Selective Erase
- ★ Erase All

Features

- ★ Unread Message Indication
- ★ Duplicate Message Indication
- ★ Memory Retention(When Power Off)
- ★ Reflective Backlighting
- ★ Auto On/Off Timer
- ★ Battery Back-Up
- ★ Low Battery Indication
- ★ 1 AAA Battery

External View of Nixxo Platinum Pager

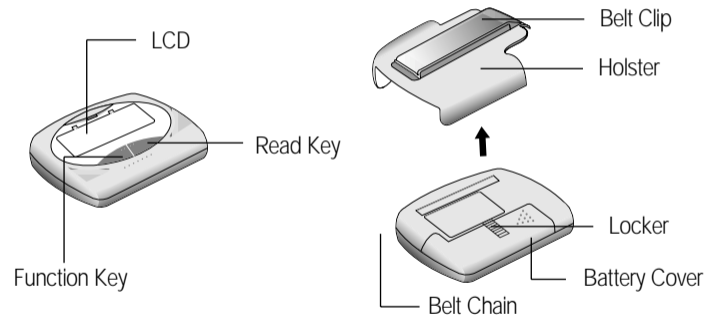

D escription of Control Keys



● Read Key

- ★ Reading Message
- ★ Selecting Menu
- ★ Stopping Alert & Alarm

● Function Key

- ★ LCD Illumination
- ★ Entering Menu Set
- ★ Changing Alert Mode

D escription of Icons



- : Pager Alert Mode - Beep Tone
- : Pager Alert Mode - Melody
- : Pager Alert Mode - Vibration
- : Message Lock - On
- : Alarm Mode - On
- : Low Battery Indicator
- : Service Area Indicator
- : Auto On/Off Timer - On
- : Duplicated Message received
- : Message continued

Basic Pager Operation

1. Initial Set Up

● Power ON

To turn the power on, press Function Key for 2 seconds.



● Power OFF

To turn the power off, press Function key twice. "Tone Off?" will be displayed.



Basic Pager Operation

Press Read Key to scan through the menu until you reach "Power Off?" Press Function Key to turn off.



Note) The pager will still display the date and time, but the keys do not work at all. And the pager will not receive pages.

If you wish to turn the pager on, press and hold the Function key for 2 seconds.




B Basic Pager Operation

- Registering Date And Time
Press Function Key. The back light comes on.
Then press Function Key again. "Tone Off?" will be displayed.



Press Read Key to scan to "Set Time".

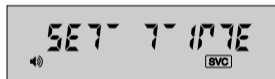

Press Function Key to select menu.
Then first digit will blink.



B Basic Pager Operation

- Press Read Key to select data.
Press Function Key to enter selected data.



Repeat above steps to set all fields.



- Default Settings
 - ★ Alert Mode : Sound
 - ★ Alarm : Off
 - ★ Auto On/Off Timer : Off
 - ★ Message Lock : Off
 - ★ Unread Tone Function : Off

Basic Pager Operation

2. Basic Operation

● Changing Alert Mode

From sound to vibration, press Function Key. The back light comes on. Then press Function Key again. "Tone Off?" is displayed.

Press Function Key to confirm. The pager will beep to confirm change.

From vibration to sound, repeat the procedure above. Look for the speaker symbol to appear.



Basic Pager Operation

● Reading Message

When a message is received, the pager alerts the user via sound alert for 15 sec or vibration for 6sec. and "Page" is displayed. Press Read Key to read the message.

If the pager has 16 Messages, "Page Full" is displayed.

If the pager has no message, "No page" is displayed.




Basic Pager Operation

In case the pager has over 16 messages, it erases the oldest one to make room for the newest one.


To read a message in memory, do the following:

Press Read Key. This displays when the 1st message was received.

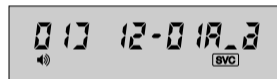


017 is the sequence of the message in memory.
3 (the last alphabet) means message address.

Press Read Key again to read your message.
The most recent page is displayed first.

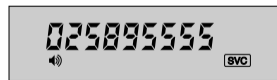


Basic Pager Operation

If the message continues to next page, the icon  is displayed.



Press the Ready Key again to read the continued message.

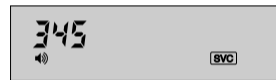

Basic Pager Operation

Erasing a Message

If you want to erase the message you are reading, press Function Key. Back light comes on. Then press Function Key again.

Pager will ask you to confirm.

Press Function Key to confirm. If not, press Read Key to cancel.



User's Options

1. What options this pager has

Menu A

- ★ Set Time
- ★ Set Alarm
- ★ Set Melody
- ★ Power Off

Menu B

- ★ Erase All
- ★ Set Lock Function
- ★ Unread Function
- ★ Set Auto Timer

User's Options

2. Instruction to Enter User's Option

● Menu A

 
Press Function Key. The back light comes on. Then press Function Key again. "Tone Off?" is displayed.



Press Read Key to scan through the following menu. Press Function Key to select the menu you wish to use.



Set time



Set Alarm



Set Melody



Power Off



User's Options

● Menu B

Press Function Key. The back light comes on. Then press the Function Key again and hold for 2 seconds. "Tone Off?" is displayed first then the display changes to "Erase All", which is the first option in menu B.

 


Then press the Read Key to scan menu B. Press Function Key to select the menu.

Erase All




Set Lock Function



Set Unread Function



 Set Auto Timer



User's Options

3. Selecting & Changing Options


● Menu A

- Set Time...Described in Initial Set-up, page 12.
- Set Alarm...The procedure is similar to setting Date & Time.
- Set Melody

Go to menu A and find "Melody Set" mode.

Press Function Key to enter "Melody Set".

To choose a melody(No. 1~4) or a tone (No. 5), press Read Key. Then press Function Key to Confirm.

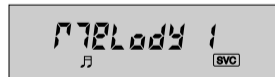

- Power Off...Described in Initial Set-up, page 10.

User's Options

- Menu B
 - Erase All



*NOTE : Read all stored messages before you enter this mode.
This procedure will erase all stored messages.*

Press Function Key on "Erase All". It erases all stored messages.



- Set Message Lock Function


You can protect received messages from being erased with this function.

User's Options

Press Read Key to "Set Lock Fcn"
Press Function Key on "Set Lock Fcn".
Press the Read Key to turn the message lock
On or Off. Press the Function Key to confirm.

If you want to use the function, set "Lock Fcn
On" first.


Then, if you want to protect a received message from being erased, do the
following;

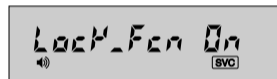


User's Options

Please read the message first. Then press
Function Key. The back light comes on. Press
Function Key again.

"Erase?" is displayed.
Press Read Key.

"Lock?" is displayed. Press Function Key to
confirm. You can see icon  when you
read the locked message.

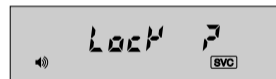

User's Options

If you want to unlock the locked message, read the message first. Then press Function Key.

“Unlock” is displayed. Press Function Key again to confirm.



User's Options

c. Set Unread Tone Function

If you do not read a received message, the pager alerts you by a beep tone.

To setup “Unread Fcn” On/Off, press Function Key on “Unread Fcn”. Select On/Off using Read Key, then press Function Key to confirm.



User's Options

d. Set Auto Timer

If you set Auto timer On, the pager power is off from 1:00 A.M to 5:00 A.M.

Press Function Key on "Set Auto".

"Auto On/Off" is blinking. Select On/Off using Read Key, then press Function Key to confirm.



Battery Information

1. Low Battery Indication

When the battery is low, "Low Battery" is displayed and the pager will beep.



 
2. Replacing the Battery

NIXXO PLATINUM is designed to use a single AAA alkaline battery.

To replace the battery, do the following;

Slide locking switch to the unlock position. Slide the battery cover off the pager. Remove the old battery and insert a new AAA Battery in the direction shown on the battery compartment.

Battery Information

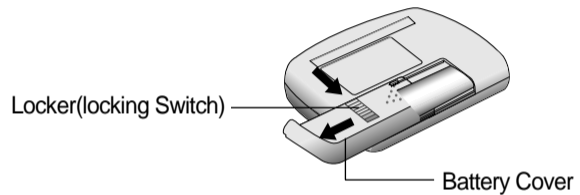

3. Battery Back Up

NIXXO PLATINUM has battery back up function. note)To protect all the memory when you replace the battery, please change old battery to new one quickly. And please avoid too much key operation during replacing battery.