



WORDline™
WORDline FLX™

USER'S GUIDE

Contents

INTRODUCTION	1	ALARMS	12
Effective Use of Your Pager	1	Setting the Alarm	12
Sending a Test Page to Yourself.....	1	MESSAGE FEATURES	14
Controls	2	Locking Personal Messages.....	14
GETTING STARTED	3	Unlocking Personal Messages	14
Turning Your Pager On	3	Private Time	15
Backlight	3	Deleting Messages	17
Menu Icons	4	Storing Messages	18
Turning Your Pager Off	4	Automatic Message Deletion.....	18
MESSAGES	5	INFORMATION SERVICES	19
Types of Messages	5	Information Services.....	19
Setting the Scroll Speed	5	Reading Information Services	20
Receiving/Reading Messages.....	6	Turning the Alert On and Off	21
Scanning Your Messages.....	8	Turning the Bookmark On	22
Duplicate Messages	8	OTHER FEATURES	23
TIME/DATE	9	Out of Range	23
Setting the Time and Date.....	9	Message Error Icons	23
ALERTS	10	USE AND CARE	24
Setting the Incoming Alert	10	Cleaning Your Pager	24
Choosing an Audio Alert.....	11	Functionality and Use	24
		Care and Maintenance	24
		BATTERY	25

Congratulations on purchasing the Motorola® WORDline™ or WORDline FLX™ pager. The WORDline FLX pager incorporates the latest in paging technology. FLEX technology extends battery life up to four times longer than ordinary pagers and improves the ability to receive pages.

This compact pager combines messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide. This user's guide includes a detachable Quick Reference Card on the back cover.

Effective Use of Your Pager

Your pager can help you keep in contact with everyone important to you. By giving your pager number to your business associates, family, and friends, you can be contacted when necessary.

If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

Sending a Test Page to Yourself




After your pager has been activated by your service provider, send yourself a test page.

INTRODUCTION

INTRODUCTION

Controls



-  Mode Used to scroll through available choices, or to increment a digit.
-  Select Used to select and confirm a choice.
-  Read/Power On Used to read a message, to save a setting, to turn on the pager, to turn on the backlighting, and to exit from a menu.

 
Turning Your Pager On



Press **⏻** to turn your pager on.

A start-up message is displayed momentarily and your pager activates the currently selected alert.

Note: The start-up alert can be stopped by pressing any button.



When the pager is on and no activity is taking place, the standby screen is displayed. The standby screen displays the power indicator, the time and date, the alert mode, and may display other pager indicators such as alarm status.

Backlight

Press and hold **⏻** for one second or more to activate the LCD message screen backlight.

GETTING STARTED

3

Menu Icons

The four menu icons on the top row (**Ⓜ** **🗑** **🔔** **🔔**) correspond to the four menus: **CONTROLS**, **DELETE ALL**, **ALERTS**, and **ALARMS**.

The first time you press **⏻** these menu icons are displayed. The controls menu icon **Ⓜ** flashes, indicating that pressing **▶** will enter the controls menu.

Press and release **⏻** to display the **CONTROLS?**, **DELETE ALL?**, **ALERTS?**, and **ALARMS?** menu prompts. Press **▶** to enter the corresponding menus, or press **⏻** to return to the standby screen.

Turning Your Pager Off



❶ From the standby screen, press **⏻** to display **CONTROLS?**. The controls menu icon **Ⓜ** flashes.



❷ Press **▶** to display **OFF?**.



❸ Press **▶** to turn the pager off. The off screen is displayed without any icons.

4

Types of Messages

The message indicators define the type of message received and flash until the message is read.

Personal messages: **▲** unselected **■** selected

Information services

when received: **■** unselected **■** selected

■ unselected **■** selected (FLEX)

when chirp is on: **🔔** unselected **🔔** selected

when bookmark is on: **✓** unselected **✓** selected

Setting the Scroll Speed

You can choose the speed at which your messages scroll, or read them line by line.



❶ From the standby screen, press **⏻** to display **CONTROLS?**. The controls menu icon **Ⓜ** flashes.

❷ Press **▶** to enter the **CONTROLS** menu.



❸ Press and release **⏻** until **SCROLL?** is displayed.

❹ Press **▶** to enter the **SCROLL** menu.

5

MESSAGES

MESSAGES



 
❺ Press and release **⏻** to choose the scroll speed.

❻ Press **▶** to select the scroll speed.

There are four scroll speeds to choose from: **LINE-BY-LINE**, **SCROLL 1**, **SCROLL 2**, and **SCROLL 3** (fastest).

Receiving/Reading Messages


When a message is received, your pager either alerts audibly (audio, chirp, and Escalart™ modes) or vibrates. A message indicator (for example **1**, **2**, etc.) lets you know how many messages you have received. On some models, this message indicator displays on the standby screen. On all models, pressing **⏻** displays the message status screen.



❶ Press any button to stop the alert.

❷ Press **⏻** to display the message status screen. The message indicators for unread messages **▲** flash until any part of the message is read.

 6

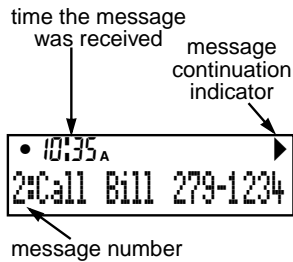

- 3 Press **OK** to read the selected message or press **Left** to select another message, then press **OK**.
Hint: On this screen, pressing **Left** displays the previous screen.
- 4 If your pager is set to scroll the message automatically (SCROLL 1, SCROLL 2, or SCROLL 3), the remainder of the message is automatically displayed at that speed.
Hint: To pause or restart a scrolling message, press **OK**.
If the scrolling speed is set to LINE-BY-LINE, press **OK** to view the next screen.
- 5 Allow the pager to automatically return to the standby screen, or press **Left** then **OK**.

Note: If a message is unread, your pager gives a periodic alert until all unread messages are read. This will continue for up to 30 minutes. A message is considered read if any part of the message is displayed.

7

MESSAGES

MESSAGES

Scanning Your Messages

When the first line of a message is displayed, press **Right** to scan all messages of the same type. The message number and the first line of the message are displayed for each message.

 
Duplicate Messages



When a duplicate message is received, DUPLICATE is displayed after the message number and before the message. The time the duplicate message was received is displayed.

8

Setting the Time and Date



- 1 From the standby screen, press **Left** to display CONTROLS?. The controls menu icon **Ⓜ** flashes.
- 2 Press **Right** to enter the CONTROLS menu.
- 3 Press and release **Left** until TIME/DATE? is displayed.
- 4 Press **Right** to enter the TIME/DATE menu. The hour field flashes.
- 5 Press and release **Left** to adjust the hour.
- 6 Press **Right** to move to the next field.
- 7 Repeat steps 5 and 6 for the minutes, AM/PM, month, and day fields.
- 8 Press **OK** from any field to save.

Hint: Pressing and holding **Left** scrolls through selections quickly.

9

TIME/DATE

ALERTS

Setting the Incoming Message Alert

You can set your pager to alert with a vibrating alert (vibration with no alert tone), one of the audio alerts, a chirp alert (short beep alert), an alert of increasing volume (Escalert), or no alert (completely silent).



 
- 1 From the standby screen, press and release **Left** until ALERTS? is displayed. The alert icon **🔊** flashes.
- 2 Press **Right** to enter the ALERTS menu. VIBRATE? is displayed.
- 3 Press and release **Left** until your choice of VIBRATE?, AUDIO?, CHIRP?, ESCALERT?, or NO ALERT is displayed.
- 4 Press **Right** to select the desired alert. The standby screen is displayed with the corresponding alert icon.

10

Note: If the audio alert mode is selected, your pager automatically displays the audio alert options screen.

Choosing an Audio Alert

If you select the audio alert mode, you can set your pager to alert with one of the audio alerts.

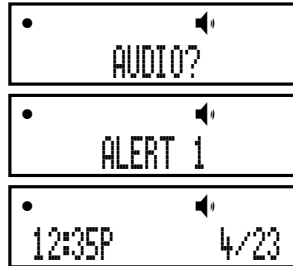


- 1 From the ALERTS menu, press and release until AUDIO? is displayed.
- 2 Press to enter the AUDIO menu.
- 3 Press until your choice of audio alert is displayed. The pager emits a sample of each alert.
- 4 Press to select your choice of audio alert. The standby screen is displayed with the audio alert icon .

11

ALERTS

Setting the Alarm

 
Your pager has three alarms. Each alarm can be set for either a specific time and date, or for a specific time on a daily basis. If your pager is off when an alarm sounds, it remains off.

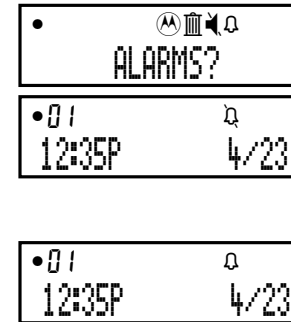

- 1 From the standby screen, press and release until ALARMS? is displayed. The alarm icon flashes.
- 2 Press to enter the ALARMS menu. The alarm number 01 flashes.
- 3 Press to choose alarm 01, 02, or 03.
- 4 Press to move to the next field. The enable or disable icon flashes.
- 5 Press to enable or disable the alarm.
- 6 Press to move to the hour field. The hour flashes.

12

 ALARMS

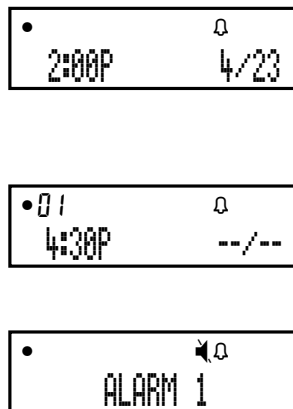

- 7 Press and release to adjust the hour.
Hint: Press and hold to adjust the setting quickly.
- 8 Press to move to the next field.
- 9 Repeat steps 7 and 8 to set the minutes, AM/PM, month, and day fields.
- 10 Press in any field to save and exit.

When an alarm is enabled, the alarm icon is displayed on the standby screen.

To alert on a daily basis, set the month and day to --/--.

When an alarm expires, the alarm icon flashes, ALARM is displayed with the alarm number, and your pager alerts.

 
Press any button once to stop the alarm, and again to clear the message.

13

ALARMS

Locking Personal Messages

By locking messages, you can save personal messages to prevent them from being replaced when the memory is full. Messages can be locked only while reading them.

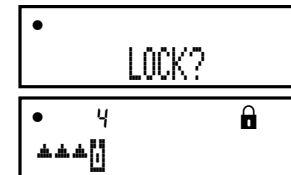

- 1 Press while reading a personal message to display LOCK?.
- 2 Press to lock the message. The message indicator is displayed.
When a locked message is selected or read, the lock icon is displayed.

Note: Up to eight personal messages may be locked. To lock another message once this limit is reached, you must first unlock at least one message.

Unlocking Personal Messages



- 1 Press while reading a locked personal message to display UNLOCK?.

14

MESSAGE FEATURES



- 2 Press **▶** to unlock the message. The message indicator **▲** is displayed.

Private Time

This feature allows you to turn off all pager alerts during a preselected time period. Messages received during this time period are stored. When enabled, private time works on a daily basis. When disabled, no pager alerts are turned off during the private time setting.



- 1 From the standby screen, press **▼** to display **CONTROLS?**. The controls menu icon **Ⓜ** flashes.



- 2 Press **▶** to enter the **CONTROLS** menu.



 
- 3 Press and release **▼** until **PRIVATE TIME?** is displayed.

15


MESSAGE FEATURES



- 4 Press **▶** to enter the **PRIVATE TIME** menu. The private time enable **Ⓢ** or disable **•** icon flashes.



 
- 5 Press **▼** to enable **Ⓢ** or disable **•** private time.



- 6 Press **▶** to move to the next field. The hour field of the start time flashes.

- 7 Press **▼** to adjust the start time hour.

 - 8 Repeat steps 6 and 7 to adjust the start time minutes, AM/PM, stop time hour, minutes, and AM/PM.



- 9 Press **Ⓢ** from any field to save and exit. While private time is active, **▲** is not displayed, and the pager does not alert.

16

MESSAGE FEATURES

Deleting Messages

Messages may be deleted one at a time or all at once.

Deleting a Single Message



- 1 While reading a message press and release **▼** until **DELETE?** is displayed.
- 2 Press **▶** to delete the message.

Deleting All Messages

The **DELETE ALL** command deletes all read and unlocked personal messages and information services. Locked or unread messages are not deleted.



- 1 From the standby screen, press and release **▼** until **DELETE ALL?** is displayed. The delete icon **Ⓜ** flashes.



- 2 Press **▶** to enter the **DELETE** menu. The delete confirmation **DELETE?** is displayed.
- 3 Press **▶** to delete all personal messages.

17

MESSAGE FEATURES

Storing Messages

Your pager can store up to 16 personal messages. Each stored message is assigned a number, which is displayed when the message is stored. The first message received is 1, the second is 2, and so on.

Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.

When the message memory is full, **MEMORY FULL** is displayed. Press any button to return to the standby screen.

If all messages are unread, the oldest, unlocked message is deleted and **OVERFLOW** is displayed.

18

MESSAGE FEATURES

Information Services

Information services are typically news or general updates which provide relevant information.


Your WORDline pager may be equipped with information services. If your pager has this capability, you will receive regular updates throughout the day in up to 3 different information categories. Updates include sports scores and sports news, top stories, and entertainment news.

 
Note: Content providers and content are subject to change without notice. Update schedules may vary depending upon your service provider. Contact your service provider if you are interested in receiving information services.








19

INFORMATION SERVICES

Reading Information Services


When an information service message is received,  flashes for 12 seconds and the number of unread information services is displayed. After 12 seconds, the standby screen is displayed.

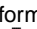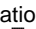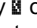



 - 1 Press  to display the message status screen.
- 2 Press  to enter the information service menu. The information service message icons display  or  when selected and  or  when unselected.
- 3 Press  to move to the message you want to read. The corresponding message slot number is displayed.



20

INFORMATION SERVICES



- 1 Press  to read the message. The time the information service was received is displayed with the first screen of the message.


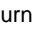
 indicates the message is continued on an additional screen.

Note: To return to the standby or message status screen while reading a message, press  and then .

Turning the Information Service Alert On and Off

You can set an information service alert for each message slot.



 
- 1 While reading an information service message, press  until CHIRP ON? or CHIRP OFF? is displayed.
- 2 Press  to turn chirp on or off for that information service message slot.





21

INFORMATION SERVICES

Turning the Information Service Bookmark On

You can set a bookmark to hold your place in a lengthy information service while reading it.


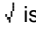


- 1 While reading an information service message, press  to display BOOKMARK?.
- 2 Press  to activate the bookmark. The message menu screen is displayed.  is displayed in the information service menu. The next time you read that information service message, the message begins at the point where the bookmark was placed.  indicates a selected bookmarked message.


22


INFORMATION SERVICES

Out of Range

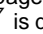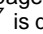If your pager is equipped with this feature, and if you are outside your paging coverage area,  is displayed. As long as  is displayed, your pager cannot receive messages.

Message Error Icons

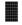If there is an error in the message received, the error icon  is displayed over each errored character in the message.

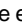If this option is enabled, and if the truncated message icon  is displayed at the end of the message, either the message was too long, or there was not enough memory to store the message.

23

OTHER FEATURES

Cleaning Your Pager

To clean smudges and grime from the exterior of your pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

Functionality and Use of Your Pager

For questions pertaining to the functions and use of your Motorola pager please visit our web site at www.motorola.com/pagers or in the U.S. call 1-800-548-9954 or 1-800-793-7834 (TDD). For questions pertaining to your paging service, contact your paging service provider.

Care and Maintenance


The WORDline and WORDline FLX pagers are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the pager. Do not expose your pager to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

24

USE AND CARE

You can protect your pager purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact either your paging service provider, retailer, or Motorola, Inc. at 1-800-548-9954. For repairs, call Motorola, Inc. at 1-800-548-9954 in the U.S. or 1-800-323-9685 in Canada. In the U.S., to contact Motorola, Inc. on your TDD, call 1-800-793-7834.

Battery Information

Your WORDline or WORDline FLX pager operates with one AAA-size alkaline battery. When the battery is low, the low-battery icon  is displayed between the time and date on the standby screen. Change your battery within five days of receiving a low-battery indication.

 
Messages are retained when replacing the battery. To retain pager alert settings, turn the pager off before removing the old battery.

25

BATTERY

Replacing the Battery

- 1 Turn your pager off.
- 2 To remove the old battery, slide the battery door lock towards the top of the pager to unlock the battery door.
- 3 While pressing on the battery door, slide the door until the ribs on the battery door align with the ribs on the back cover.
- 4 Lift the battery door to free it from the housing.
- 5 Remove the battery.
- 6 Align the new battery so the positive (+) and negative (-) markings match the polarity diagram in the battery compartment. Insert the battery.
- 7 To replace the battery door, align the grooves on the battery door with the grooves on the back cover and slide the battery door closed.
- 8 Slide the battery door lock toward the bottom of the pager to lock the battery door.

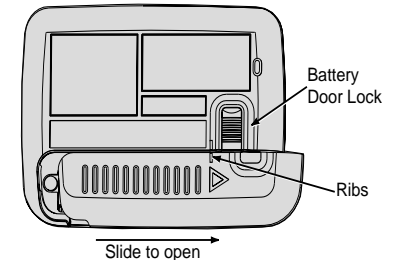

26

BATTERY

NOTES

NOTES

NOTES

Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

Ⓜ, Motorola, WORDline, WORDline FLX, Escalart, and Ⓜ are trademarks or registered trademarks of Motorola, Inc.

© 1997 by Motorola, Inc. All Rights Reserved.
Paging Products Group
1500 Gateway Blvd., Boynton Beach, FL 33426-8292
Printed in U.S.A. 7/97



6881028B95-A

WORDline™ and WORDline™ FLX Quick Reference Card

Indicators and Icons

- On
- ☉ On, Private Time enabled
- ☰ Message, selected
- ▲ Message, unselected
- Ⓜ Controls menu
- ☒ Delete All menu
- 🔊 Audio alert
- 🔊 Alerts menu/Chirp alert
- 🔊 Vibrate (silent) icon
- 🔊 Alarm menu/Alarm enabled
- 🔊 Alarm disabled
- 🔒 Locked message
- 🔒 Out of range
- ▶ Message continuation
- 🔋 Low-battery
- ☰ Information service menu, selected
- ☰ Information service menu, unselected
- ☑ Information service message, selected
- ☑ Information service message, unselected
- ☑ Information service message, selected (FLEX)
- ☑ Information service message, unselected (FLEX)
- 🔊 Information service, Chirp on, selected
- 🔊 Information service, Chirp on, unselected
- 🔖 Information service, Bookmark, selected
- 🔖 Information service, Bookmark, unselected
- 🔒 Locked message, selected
- 🔒 Locked message, unselected

Control Buttons: Mode Select Read/Power On

Setting the Alarm

- 1 Press until ALARMS? is displayed.
- 2 Press .
- 3 Press to choose alarm 01, 02, or 03.
- 4 Press to move to the next field.
- 5 Press to enable or disable the alarm.
- 6 Press to move to the hour field.
- 7 Press and release to adjust the hour.
- 8 Press to move to the next field.

9 Repeat steps 7 and 8 to set the minutes, AM/PM, month, and day fields.

10 Press from any field to save and exit. To alert on a daily basis, set the month and day to --/--.

Locking and Unlocking Messages

While reading a personal message, press to display LOCK? or UNLOCK?. Press .

Deleting a Single Message

Press while reading a message until DELETE? is displayed. Press .

WORDline and WORDline FLX Menu Map

Controls	Delete All	Alerts	Alarms
-OFF	-DELETE	-VIBRATE	-ALARM 01
-TIME-DATE		-AUDIO	-ALARM 02
-SCROLL		-CHIRP	-ALARM 03
-PRIVATE TIME		-ESCALERT	
		-NO ALERT	