


NIXXO TUTTI OVERVIEW

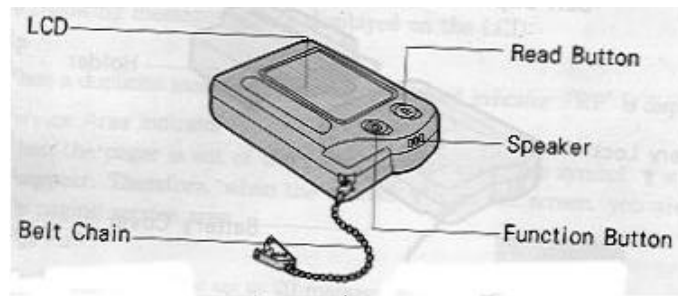

TO TURN PAGER ON/OFF

➤ Turn On

- Press Function button until the pager starts up.
- When the power is turned on, the pager beeps and vibrates,

➤ Turn Off

- Press Function button until the pager shuts off. When the power is turned off, the display will be blank.

TO SET DATE & TIME

- Press Read and Function button at the same time until "SET TIME" is displayed.
- Press the Function button once. The date and time will be displayed and the year will blink.
- Press the Read button to display the year as you want.
- When the year is displayed, press the Function button to confirm.
- Then, the month will be blinked. To set month and date, repeat the above procedure

TO SET ALERTS

- Press the Function button in standby mode, lamp works.
- Press the Function button again, beep alert is changed to vibrate mode.
- To change alert mode, press the Function button again.

TO READ MESSAGES

Nixxo Tutti can save 400 characters. (20 digit x 20 slot) When the pager receives a message, the pager will vibrate 6 seconds or beep 15 seconds. To cease vibration or beep, press any button.

- Press Read button to read a message. After displaying the memory sequence number, the date & time of an incoming message and numeric message will be displayed automatically.
- If the message is contains mote than 16 characters, the mark is displayed.
- Press Read button again to read the continued message.

TO ERASE INDIVISUAL MESSAGE

- Show the target message first by pressing the Read button.
- Press the Read button twice. It will display "ERASE?" prompt.
- Press the Function button to delete the message

TO ERASE ALL MESSAGES

- Press the Function and Read button at the same time until "SET TIME" is displayed.
- Press the Read button repeatedly until "ERASE ALL" is displayed
- Press the Function button to delete all stored message.

TO SET ALARM

➤ **SETTING ALARM TIME**

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly to display "Set Alarm" menu.
- Press the Function Button to set alarm. The hour is blinking.
- Press the Read Button to select desired time.
- Press the Function Button to confirm. The minute is blinking.
- Repeat the above procedure to set the minutes and A,M/P.M
- After setting the alarm time, press any button to exit menu mode.

➤ **SETTING ALARM ON / OFF**

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly to display the "ALARM ON" or “ALARM OFF” menu.
- Press the Function Button to activate the alarm menu.
- Press the Read Button to change the setting and press the Function button to confirm.

TO SET AUTO POWER ON

If you set this function, the pager power is automatically off from 1:00 A.M to 5:00 A.M.

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly until the “AUTO ON” or “AUTO OFF” prompt is displayed.
- Press the Function Button to activate the prompt.
- Press the Read button to change the setting.

TO LOCK A MESSAGE

➤ **SETTING LOCK FUNCTION ON / OFF**

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly until "SECRET OFF" or “SECRET ON” prompt is displayed.
- Press the Function Button to activate the prompt.
- Press the Read Button to change the setting.
- When “SECRET OFF” is selected, enter the password number to confirm the action. (Initial password is 00)

➤ **SETTING THE PASSWORD**

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly to display "SET PASS NO" prompt.
- Press the Function button to activate the prompt. When you do this, the first digit of the password will blink.
- Press the Read button to select a number in the tens place.
- Press the Function button to confirm.
- Do the above procedure to set the ones place.

➤ **PASSWORD CHANGING**

- Press the Function and Read button at the same time until “SET TIME” is displayed.
- Press the Read Button repeatedly to display "SET PASS NO" prompt.
- Press the Function button to activate the prompt.
- Enter the old password
- If the old password is entered correctly, “NEW CODE” appears and the pass number in the tens place will blink.
- Repeat “setting password” procedure.

Note) If the old password is entered incorrectly, “INPUT ERROR” will be displayed. Please, enter the password again, If you enter wrong password six times, all stored message and password is deleted to keep private message.

➤ LOCKING A MESSAGE

- Set the secret function on as above setting lock function on/off.
- Display the message you want to lock using Read button.
- Press the Read button again, "SECRET?" prompt appears on the display.
- To lock the message, press the Function button.

➤ READING LOCKED MESSAGE

- Press the Read button to read locked message. "SECRET" prompt appears on the display.
- Press the Function button and enter the password.
(See "setting password")
- If you enter correct password, locked message is displayed.

Note) If you enter wrong password 6 times, the locked message is erased.

BATTERY INFORMATION

➤ Low Battery Indication

When the battery is low, "Lo Batt" is displayed with beep alert.

➤ Replacing the Battery

NIXXO is designed to use a single AAA alkaline battery.



- Slide locking switch to the unlock position.
- Slide the battery cover off the pager.

- Remove the old battery and insert a new AAA battery in the direction shown on the battery compartment.
- Slide the battery lock switch to the locked position.